



adjustables™  
SERIES 3  
User Instructions



Height-Adjustable Worksurfaces | Series 3 User Instructions

details

## Height Adjustment

### Operating the Height Adjustment Controller

The worksurface adjusts via a simple hand crank.

- Four turns of the crank adjusts a rectangular table 1".
- Six turns of the crank adjusts a 90° or 120° table 1".
- Turn hand crank clockwise to raise the table and counterclockwise to lower the table.

### Cable Management

When installing equipment, either on the worksurface or below, be sure that the connecting cables are free of obstruction.

### Accessory Power Cord Length

- Ensure that power cords for all accessory items – computers, lights, monitors, etc. – are of sufficient length to reach outlets throughout the range of worksurface height adjustment. Do not subject the cords to any strain while adjustment of the surface is taking place.
- Always check for proper operating clearance before placing any item on, above or below the worksurface.

## Maintenance

Regularly clean dust and dirt from lifting columns. To insure all surfaces are thoroughly cleaned, make sure the lifting columns are fully telescoped to their maximum height. Also, be sure to inspect for damage.

*Caution:* To protect the painted surfaces, use a damp cloth and a cleanser that is not too highly alkaline or acidic. A pH neutral product is ideal.

*Note:* Please do not move your table on your own. Guidelines have been set-up on how to move each table. Contact your Facilities group for assistance.

## Questions?

Call 800.833.0411 or visit [www.details-worktools.com](http://www.details-worktools.com).

For a better day at work.™

**details®**

A STEELCASE COMPANY

P.O. Box 1967 / CD-5E / Grand Rapids, MI 49501-1967

[www.details-worktools.com](http://www.details-worktools.com)

©2007 Office Details Inc. All rights reserved. 9/07