

Series 5 User Instructions

adjustables™
SERIES 5



Height-Adjustable Worksurfaces | Series 5 User Instructions

details™

Height Adjustment Controller

Operating the Controller

The control panel has two buttons for user control.

- Press and **hold** either the Up or Down arrow to reach the desired height. As a safety feature, the user must continuously hold down the button in order for the table to move.

Cable Management

When installing equipment, either on the worksurface or below, be sure that the connecting cables are free of obstruction. Horizontal wire management channels are provided as standard and can be found on the underside of the worksurface. Use these channels to minimize possible entanglements.

Accessory Power Cord Length

- Ensure that power cords for all accessory items – computers, lights, monitors, etc. – are of sufficient length to reach outlets throughout the range of worksurface height adjustment. Do not subject the cords to any strain while adjustment of the surface is taking place.
- Always check for proper operating clearance before placing any item on, above or below the worksurface.

Maintenance

Regularly clean dust and dirt from lifting columns. To insure all surfaces are thoroughly cleaned, make sure the lifting columns are fully telescoped to their maximum height. Also, be sure to inspect for damage. Check the connections, cables and plugs for both correct function and secure mounting.

Caution – A damp cloth is recommended. To protect the painted surfaces, use a cleanser that is not too highly alkaline or acidic. A pH neutral product is ideal.

Note: Please do not move your table on your own. Guidelines have been set-up on how to move each table. Contact your Facilities group for assistance.

Questions?

Call 800.833.0411 or visit www.details-worktools.com.

Call Details Customer Alliance for support — 800.833.0411

P.O. Box 1967 / CD-5E Grand Rapids, MI 49501-1967 www.details-worktools.com

©2008 Office Details Inc. All rights reserved. 08/08